


Crown molding corner block installation instructions

- 1 Measure the projection of your crown molding. Then choose the block with the measurement just over the crown molding projection.




2

For vaulted ceilings measure the angle of the ceiling with an angle finder. Next mark it on the block and cut it with a saw.

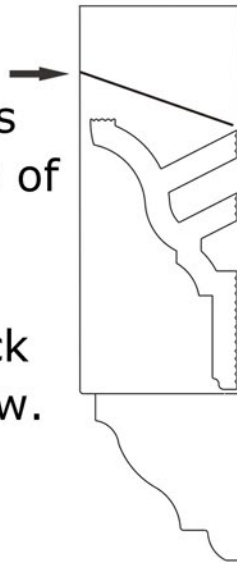


For flat ceilings measure to the top of the crown molding and saw.

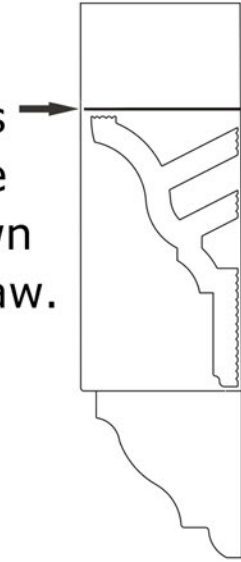

3

Apply a good bead of painters caulk in the grooves on both sides of the block.

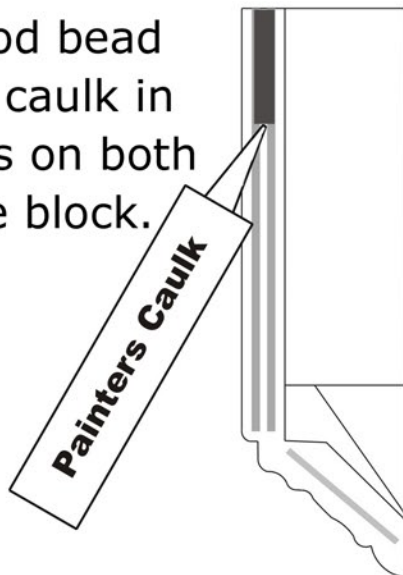

4

Next, align the block up into the corner position and press in firmly. Wipe off any excess caulk off with a caulking tool or finger.

